


# NV Image Tool MANUAL

## NV Image Tool version 2.x


This program is designated only for SRP-350, STP-131, STP-103 receipt printers.

### 1. Communication setting

Select the port according to the printer interface.

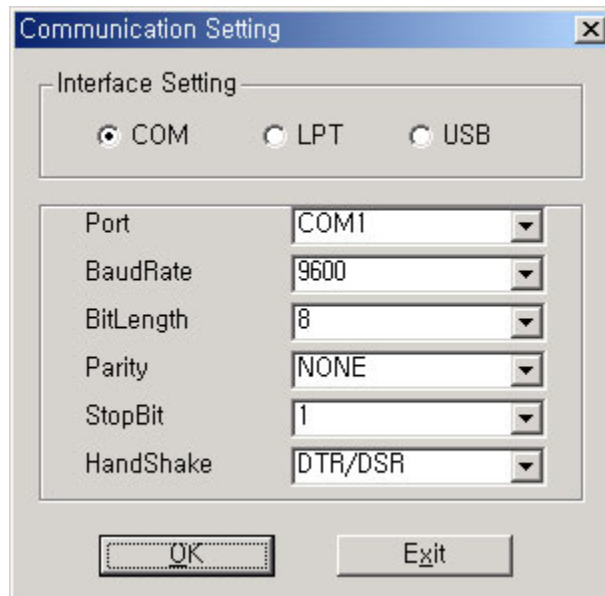


- Click on the "OK" to activate the port.
- Self test will show the printer's status. To do the self test, turn on the printer while pressing down the feed button. Downloading through serial port, all settings such as port, baud rate, bit-length, parity, stop-bit, and handshake should be equal to between printer and the utility program. Make sure that the port that you're going to use should not being used by other device. Otherwise a continuous communication error will be occurred.

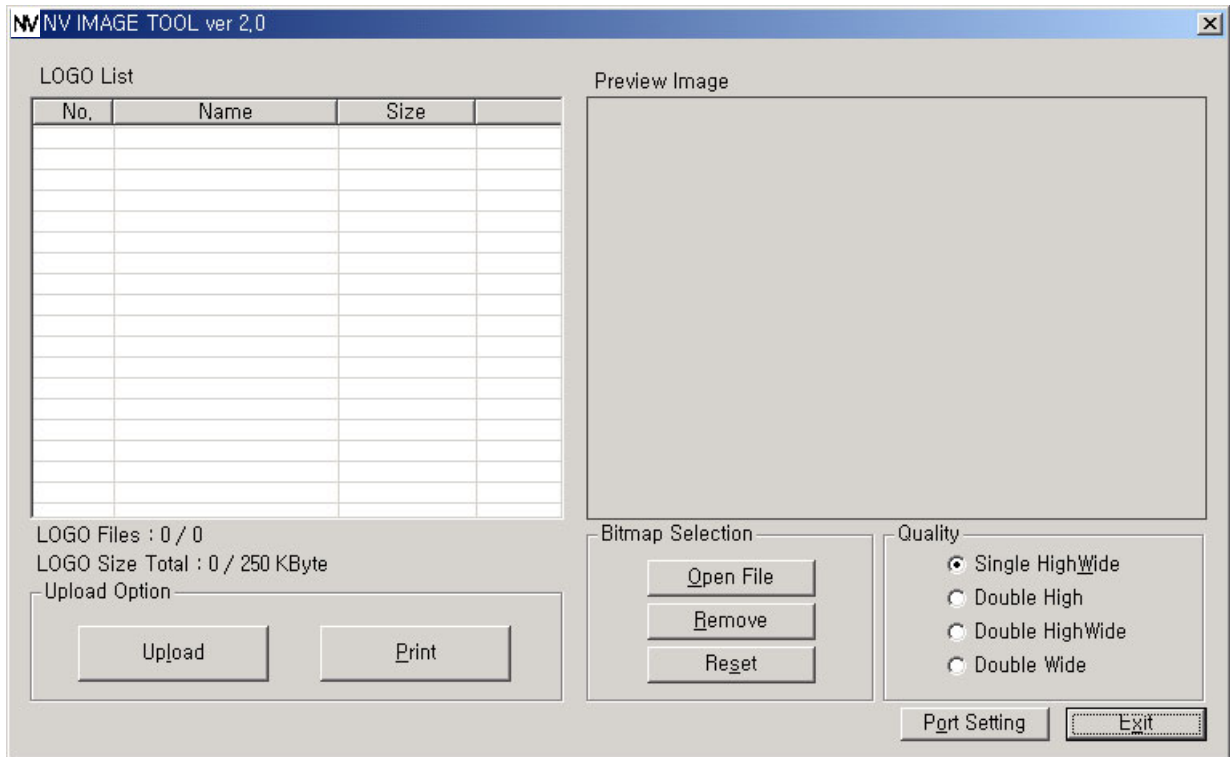


## 2. Selection Bit-map file

- 1) Click on **Open File...** to select a file you are going to download.

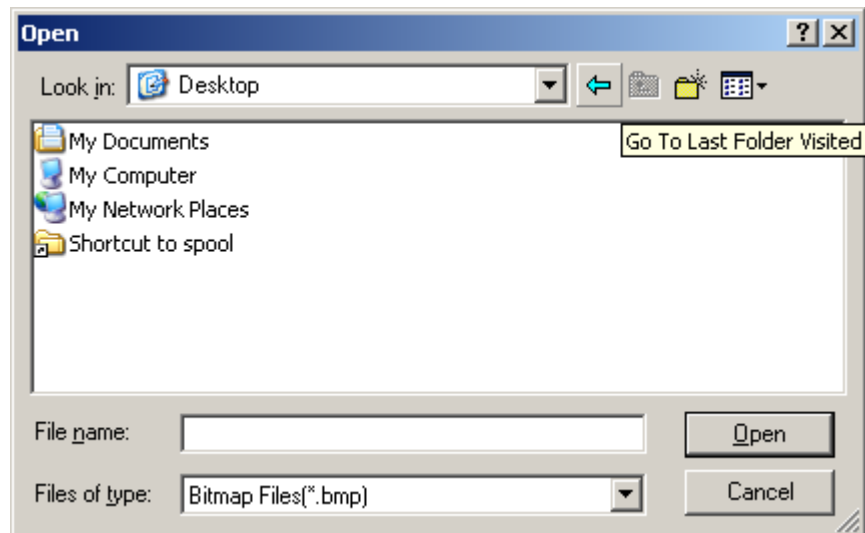


2) Click on “preview” to see the image file in advance.

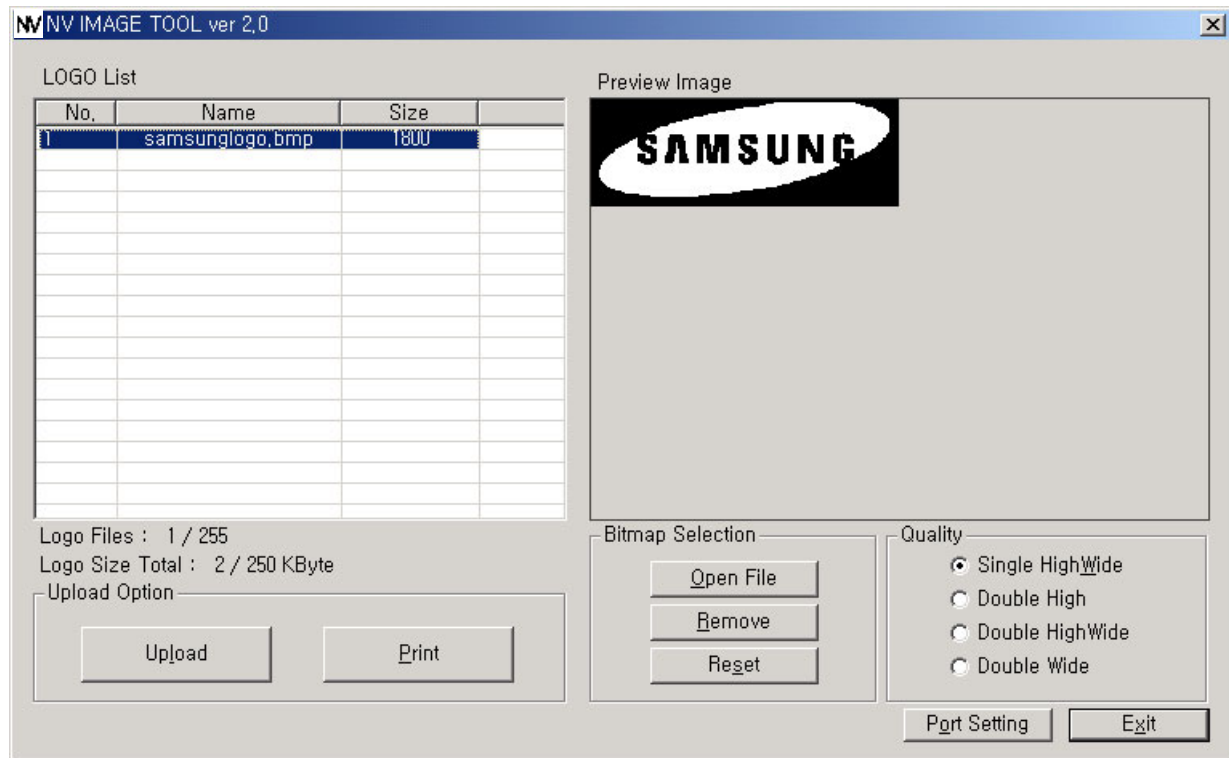


### 3. Bit-map logo upload

Click on "upload" then click on "Yes"(Y) to start to download.

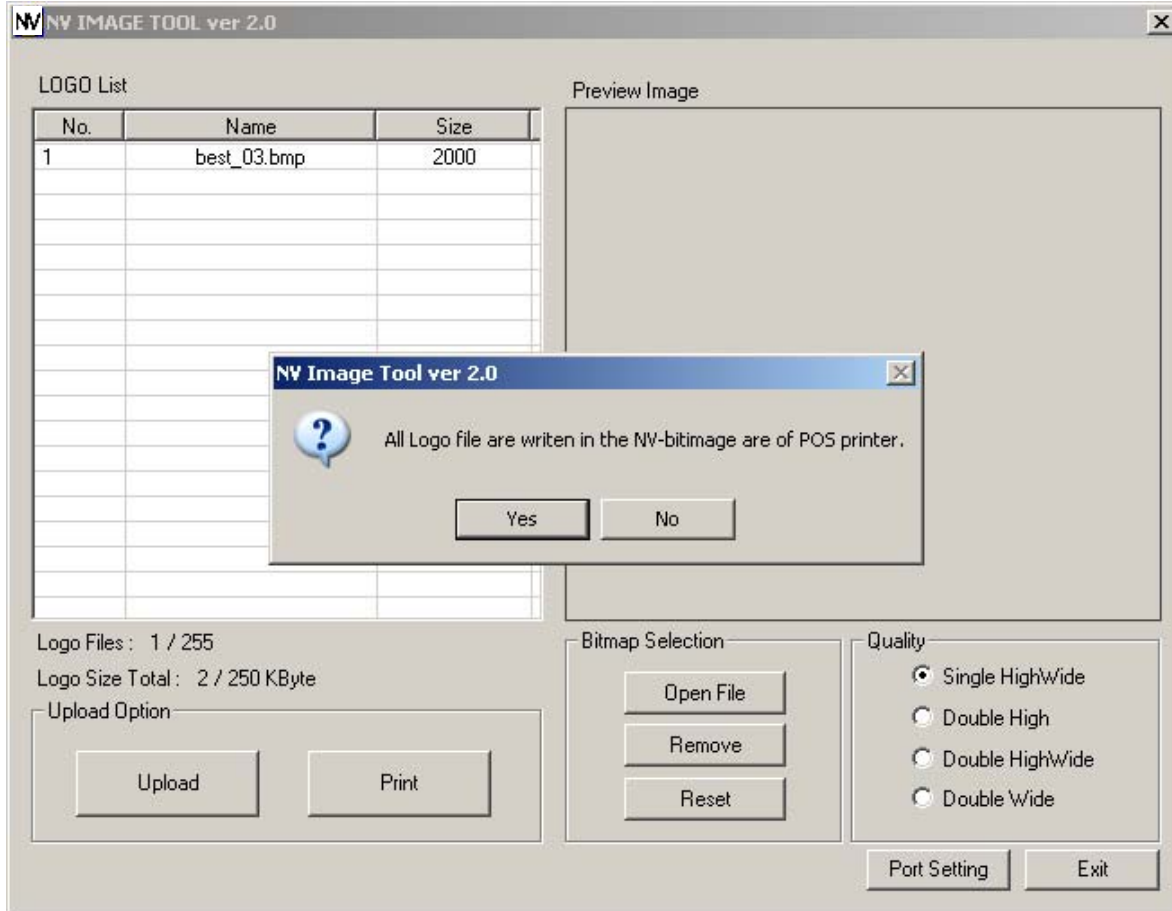


- 1) A message box will be created after the downloading job.

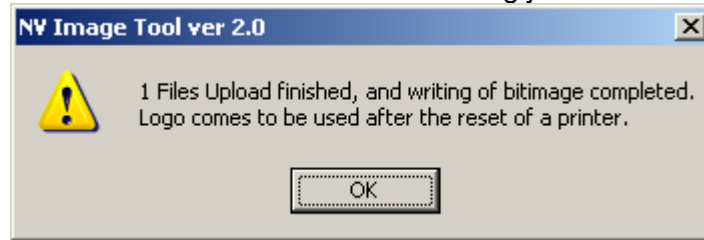


- 2) Click on 'OK' button.


#### 4. Printing the logo

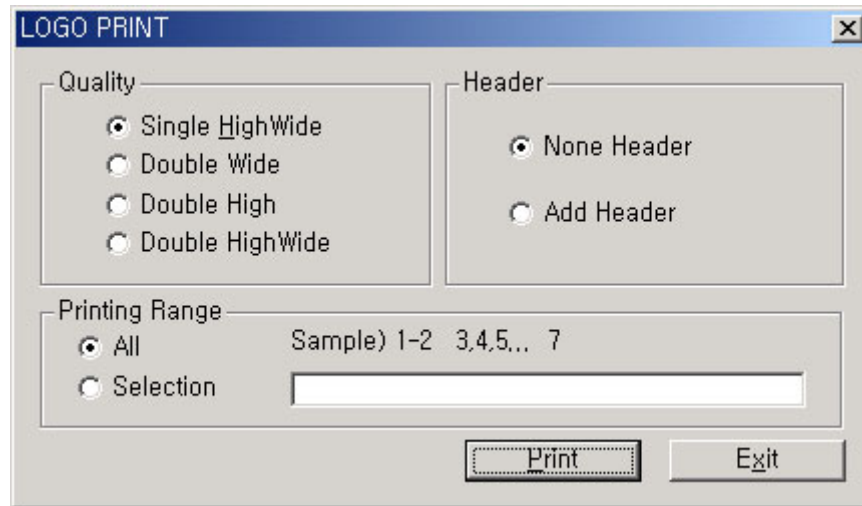

- 1) Printing Range

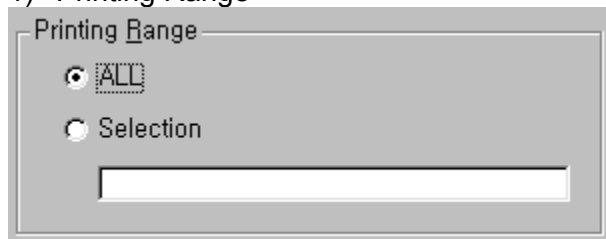

ALL : Printing all uploaded logos.  
(It takes long as it prints including empty space.)

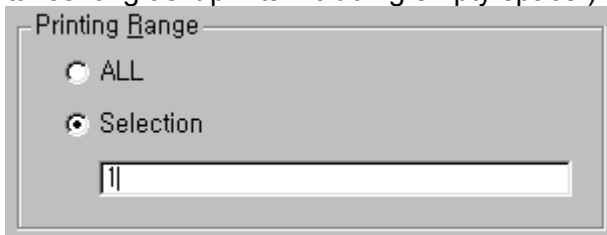

Selection: Printing uploaded logos by selection.  
(For example. 1,2,5 or 1-4,5.7-8 )

2) Quality

Single High and wide: Print logos as default width and height.


Double Wide: Print logos as double sized width.

Double High: Print logos as double sized height.

Double High and Wide : Printing logos as double width and height.

3) Header


ADD Header : Printing logos with numbers.

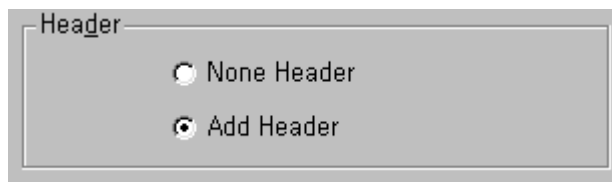

Header

☐ None Header

☒ Add Header

Please follow the above procedures and click on  button to print logos.